



# Belt Tension System

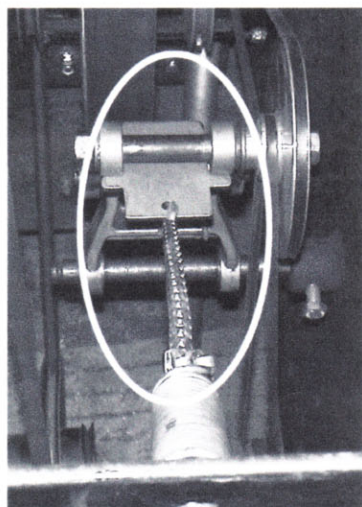

LL 300-322

- Easy installation - clips right in place with no need to remove unit
- Designed to pull up and out, providing even tension of both rudder drive belts
- Amount of tension is easily adjusted
- Comes with chain assembly, support bracket and tension bracket
- Tension bracket is zinc plated for longevity

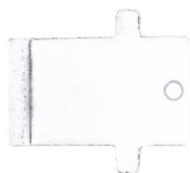

1




2



3

ITEM	PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION
	LL 300-322	Belt Tension System (Complete)	2	LL 300-322-002	Chain Assembly
1	LL 300-322-001	Tension Bracket	3	LL 300-322-003	Support Bracket

1. Install support bracket onto back of kick-back assemblies.
2. Insert the S-hook of the chain assembly into the hole in the tension bracket.
3. Insert your tension bracket into belt tensioner as shown.
4. Hook a kicker spring from the end of the chain assembly into the center hole of the support bracket.
5. Tension can be adjusted by moving the kicker spring up or down the links of the chain.

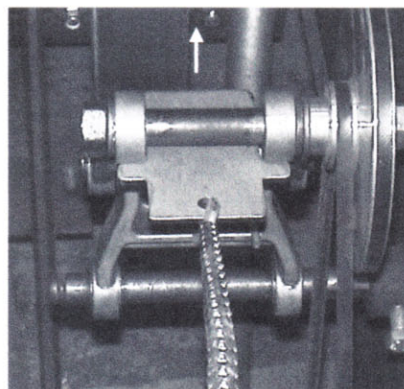

**L** **LIFELONG**  
**INTERNATIONAL**  
**BOWLING, INC.**

*"leaders in high performance specialty parts"*

Toll Free  
**1-877-235-8300**

[www.bowlingproducts.com](http://www.bowlingproducts.com)